


Ana-Digi Y121E2

(1 crown/4 pushers)

Functions:

Normal Time Mode
Calendar
Alarm
Chronograph
12/24-Hour Time
Light-Up

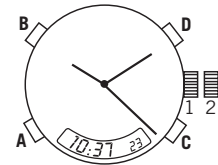

- To toggle through all functions, press C.
- To display Calendar, press A.
- To display Alarm, press B.
- To activate Light-Up, press D.

Setting Normal Time and Calendar

1. From Normal Time Mode, press C three times, Day and Seconds will flash.
2. Push A to set Seconds to zero.
3. From Step 1, press B once to select Minutes, and press A to advance to desired reading.
4. From Step 1, press B twice to select Hour, and press A to advance to desired reading.
5. From Step 1, press B three times to select Month or Date, and press A to advance to desired reading.
6. From Step 1, press B four times to select Month or Date, and press A to advance to desired reading.
7. From Step 1, press B five times to select Weekday, and press A to advance to desired reading.
8. To exit Setting Mode, press C.

Setting Alarm

1. From Normal Time Mode, press C twice, Day and Hour will flash. Press A to advance to desired reading.
2. Press B to select Minutes, press A to advance to desired reading.
3. From Normal Time Mode, press and hold B and press A once to activate Alarm.
4. To exit Alarm Setting Mode, press C.

Chime

1. From Normal Time Mode, press and hold B, then press C to activate Chime.
2. Repeat same sequence to de-activate Chime.
3. To Exit Chime, press C.

Testing Alarm

1. From Normal Time Mode, press and hold B and A together. Alarm is on and will sound a beep.
2. Press B to turn off Alarm.

Using the Chronograph

1. From Normal Time Mode, press C to reach Chronograph Mode.
2. To Start/Stop the Chronograph, press A.
3. To measure Laps, press B while the Chronograph is still counting. To resume non-lap Chronograph counting, press B.
4. To Stop Chronograph, press A.
5. To Reset Chronograph, press B.
6. To exit Chronograph Mode, press C.

Setting 12/24-Hour Time

1. From Normal Time Mode, press C three times, and press B to select Hours.
2. Press A to advance to desired setting.
3. Use "A" for AM, "P" for PM, and "H" for 24-Hour format.
4. To exit 12/24-Hour Mode, press C.