

ENGLISH


Ana-Digi Y121E2

(1 crown/4 pushers)

Functions:

Normal Time Mode
Calendar
Alarm
Chronograph
12/24-Hour Time
Light-Up

- To toggle through all functions, press C.
- To display Calendar, press A.
- To display Alarm, press B.
- To activate Light-Up, press D.

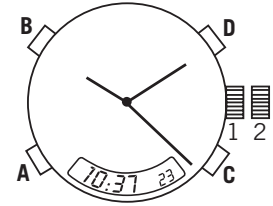

Setting Normal Time and Calendar

1. From Normal Time Mode, press C three times, Day and Seconds will flash.
2. Push A to set Seconds to zero.
3. From Step 1, press B once to select Minutes, and press A to advance to desired reading.
4. From Step 1, press B twice to select Hour, and press A to advance to desired reading.
5. From Step 1, press B three times to select Month or Date, and press A to advance to desired reading.
6. From Step 1, press B four times to select Month or Date, and press A to advance to desired reading.
7. From Step 1, press B five times to select Weekday, and press A to advance to desired reading.
8. To exit Setting Mode, press C.

Setting Alarm

1. From Normal Time Mode, press C twice, Day and Hour will flash. Press A to advance to desired reading.
2. Press B to select Minutes, press A to advance to desired reading.
3. From Normal Time Mode, press and hold B and press A once to activate Alarm.
4. To exit Alarm Setting Mode, press C.

Chime

1. From Normal Time Mode, press and hold B, then press C to activate Chime.
2. Repeat same sequence to de-activate Chime.
3. To Exit Chime, press C.

Testing Alarm

1. From Normal Time Mode, press and hold B and A together. Alarm is on and will sound a beep.
2. Press B to turn off Alarm.

Using the Chronograph

1. From Normal Time Mode, press C to reach Chronograph Mode.
2. To Start/Stop the Chronograph, press A.
3. To measure Laps, press B while the Chronograph is still counting. To resume non-lap Chronograph counting, press B.
4. To Stop Chronograph, press A.
5. To Reset Chronograph, press B.
6. To exit Chronograph Mode, press C.

Setting 12/24-Hour Time


1. From Normal Time Mode, press C three times, and press B to select Hours.
2. Press A to advance to desired setting.
3. Use "A" for AM, "P" for PM, and "H" for 24-Hour format.
4. To exit 12/24-Hour Mode, press C.

日本語

アナデジ Y121E2 (リューズ1/ 操作ボタン4)

機能:

通常時刻
カレンダー
アラーム
クロノグラフ
12/24時間表示
ライトアップ

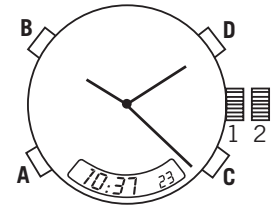

- Cボタンを押すと全ての機能の切り替えができます。
- Aボタンを押すとカレンダーが表示されます。
- Bボタンでアラームを表示します。
- Dボタンを押すとライトアップされます。

通常時刻とカレンダーの設定

1. 通常時刻が表示されている状態でCボタンを3回押すと「曜日」と「秒」が点滅します。
2. Aボタンを押すと「秒」の値がリセットされます。
3. 1.の後、Bボタンを1回押して「分」を選択し、Aボタンを押して分の値を設定します。
4. 1.の後、Bボタンを2回押して「時」を選択し、Aボタンを押して時の値を設定します。
5. 1.の後、Bボタンを3回押して「月」または「日付」を選択し、Aボタンを押して月または日付の値を設定します。
6. 1.の後、Bボタンを4回押して「月」または「日付」を選択し、Aボタンを押して月または日付の値を設定します。
7. 1.の後、Bボタンを5回押して「曜日」を選択し、Aボタンを押して週日の設定をします。
8. Cボタンを押して設定モードを終了します。

アラームの設定

1. 通常時刻が表示されている状態で、Cボタンを2回押すと「曜日」と「時」が点滅します。Aボタンを押して時間を設定します。
2. Bボタンを押して「分」を選択し、Aボタンを押して分の値を設定します。
3. Cボタンを押して設定モードを終了します。

チャイムの設定

1. 通常時刻が表示されている状態で、Bボタンを押しながらCボタンを押すとチャイムが起動されます。
2. 1.と同じ動作を繰り返すとチャイムを止めることができます。
3. Cボタンで設定モードを終了します。

アラームの確認

1. 通常時刻が表示されている状態で、AボタンとBボタンを同時に押し続けるとテストアラームが起動し、ピープ音を発します。
2. Bボタンでアラームをオフにします。

クロノグラフの使い方

1. 通常時刻が表示されている状態で、Cボタンを押すとクロノグラフモードに移行します。
2. Aボタンを押すとクロノグラフのスタート/ストップします。
3. ラップタイムを計るにはクロノグラフ作動中にBボタンを押します。Bボタンを再度押すと、クロノグラフに戻ります。
4. Aボタンを押すとクロノグラフがストップします。
5. Bボタンを押すとリセットされます。
6. Cボタンを押してクロノグラフモードを終了します。

12/24時間の設定

1. 通常時刻が表示されている状態でCボタンを3回押し、Bボタンを押して「時」を選択します。
2. Aボタンを押して希望の表示方法を設定します。
3. 午前は“A”、午後は“B”、“H”は24時間表示を示します。
4. Cボタンを押して12/24時間設定モードを終了します。