

ENGLISH

Digital with Crystal Readout UPC-835C/UPC-837C

Normal Time Display



Press B to flash calendar for 2 seconds.
Press B again to display seconds.

Time and Date Setting

1. Press A twice, month will be displayed.
2. Press B to advance digit; press and hold B for fast advance.
3. Press A to advance to next setting value.
4. Setting sequence is month, date, hour, minute.

Timer

1. In normal time mode, press B twice to display seconds.
2. Press A to restart seconds.
3. Press B again to return to normal time mode.

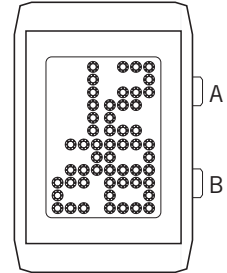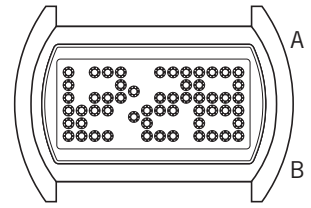

ESPAÑOL

Digital con Pantalla de Cristal UPC-835C/UPC-837C

Pantalla de Hora Normal

Presione B para mostrar el calendario por 2 segundos.
Presione B de nuevo para mostrar los segundos.

Configuración de Hora y Fecha

1. Presione A dos veces y se mostrará el mes.
2. Presione B para adelantar el dígito, presione y sostenga B para avanzar rápido.
3. Presione A para avanzar al siguiente valor de la configuración.
4. La secuencia de configuración es mes, fecha, hora y minuto.

Temporizador

1. En el modo de hora normal, presione B dos veces para mostrar los segundos.
2. Presione A para reiniciar los segundos.
3. Presione B de nuevo para volver al modo de hora normal.

